


Vorbereitung der montage




Alfa Fusion Badewanne

ALFA FUSION 170-200x75-90

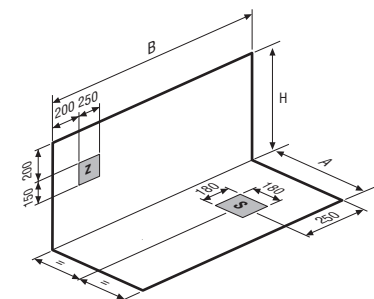

A	750 → 900	I	50 → 200
B	1700 → 2000	J	600
C	460	K	105 → 225
D	588	L	1600
E	12	M	295 → 417
F	1160	N	850 → 1000
G	430	O	45 → 75
H	600	-	-


Units: mm

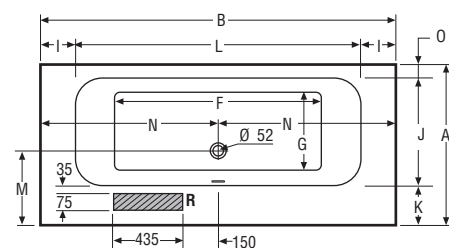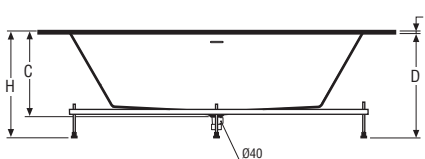

M	80x180	200x80	180x90	200x90
C	230	230	230	230
V	1,67	1,67	1,67	1,67
P	170	175	175	180




M (cm) / C (L) / V (m³) / P (Kg)

ALFA FUSION 190x90

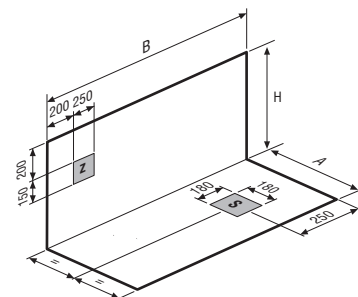


A	900	I	150
B	1900	J	600
C	460	K	225
D	588	L	1600
E	12	M	417
F	1160	N	950
G	430	O	75
H	600	-	-

Units: mm

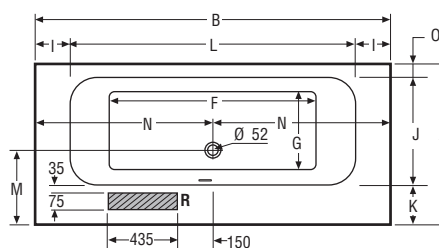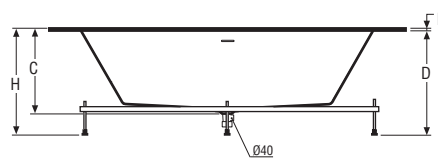




M	190x90 cm
C	230 L
V	1,67 m³
P	175 Kg

ALFA FUSION 160-178x160-178

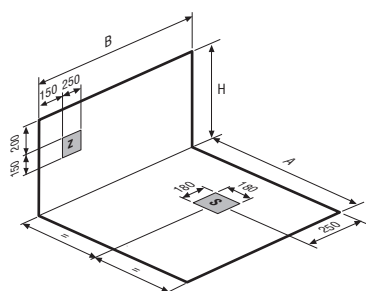

A	1600 → 1780	G	1225
B	1600 → 1780	H	650
C	510	I	110 → 200
D	638	J	1380
E	14	M	800 → 890
F	970	N	800 → 890


Units: mm

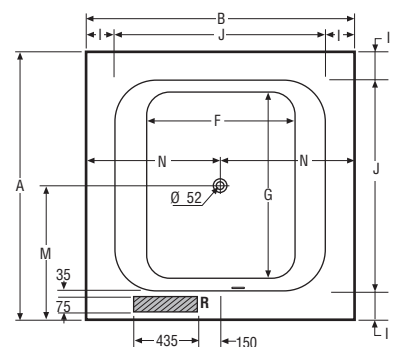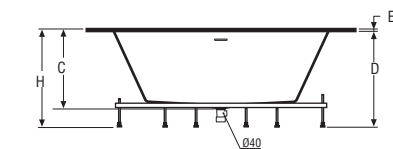

M	160x160	170x170	178x178
C	573	573	573
V	2'88	2'88	2'88
P	260	262	274




M (cm) / C (L) / V (m³) / P (Kg)

ALFA FUSION 170x170

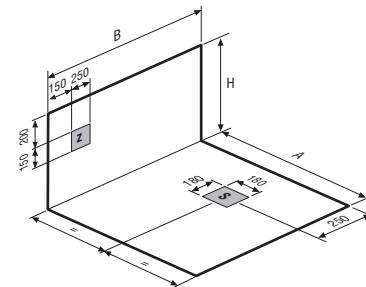

A	1700	G	1225
B	1700	H	650
C	510	I	160
D	638	J	1380
E	14	M	850
F	970	N	850


Units: mm

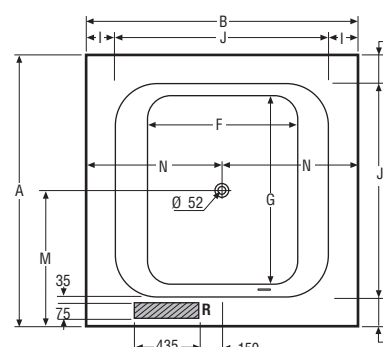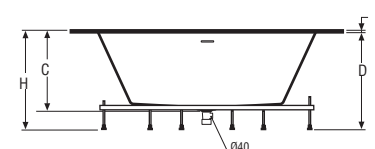

M	170x170 cm
C	573 L
V	2'88 m³
P	262 Kg

Alfa Fusion Badewanne

ALFA FUSION Free design

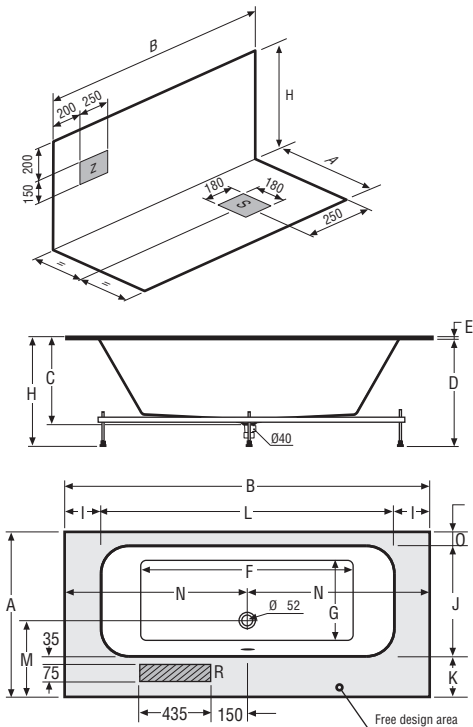


A	750 → 900
B	1700 → 2000
C	460
D	588
E	12
F	1160
G	430
H	600
I	50 → 200
J	600
K	105 → 225
L	1600
M	295 → 417
N	850 → 1000
O	45 → 75

Units: mm

M	90x200 cm
C	230 L
V	1'67 m³
P	180 Kg

ALFA FUSION Free design

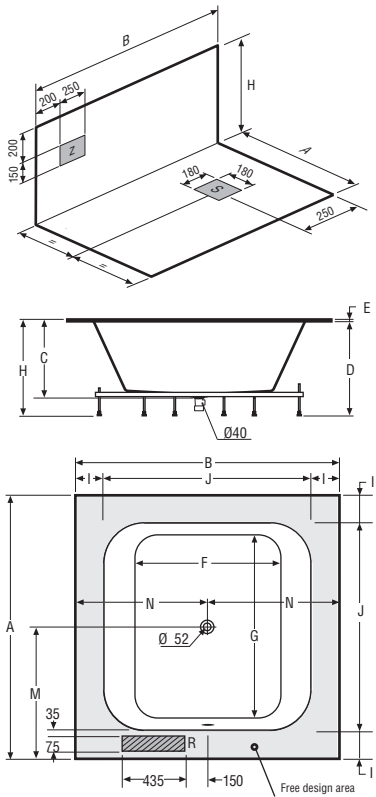

A	1600 → 1780
B	1600 → 1780
C	510
D	638
E	14
F	970
G	1225
H	650
I	110 → 200
J	1380
M	800 → 890
N	800 → 890

Units: mm


M	160x160	170x170	178x178
C	573	573	573
V	2'88	2'88	2'88
P	260	262	274

M (cm) / C (L) / V (m³) / P (Kg)


Montage

Alfa Fusion Badewanne


1

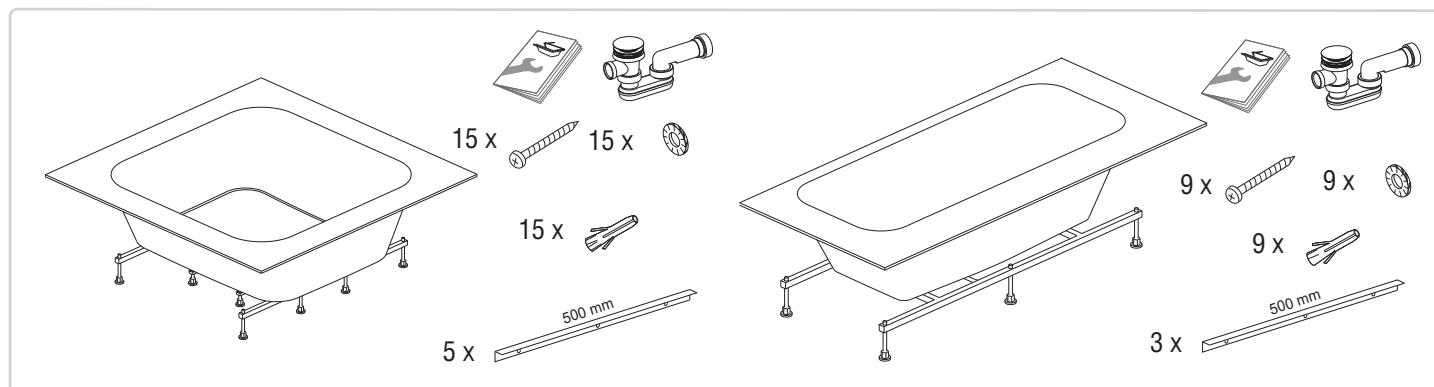


2

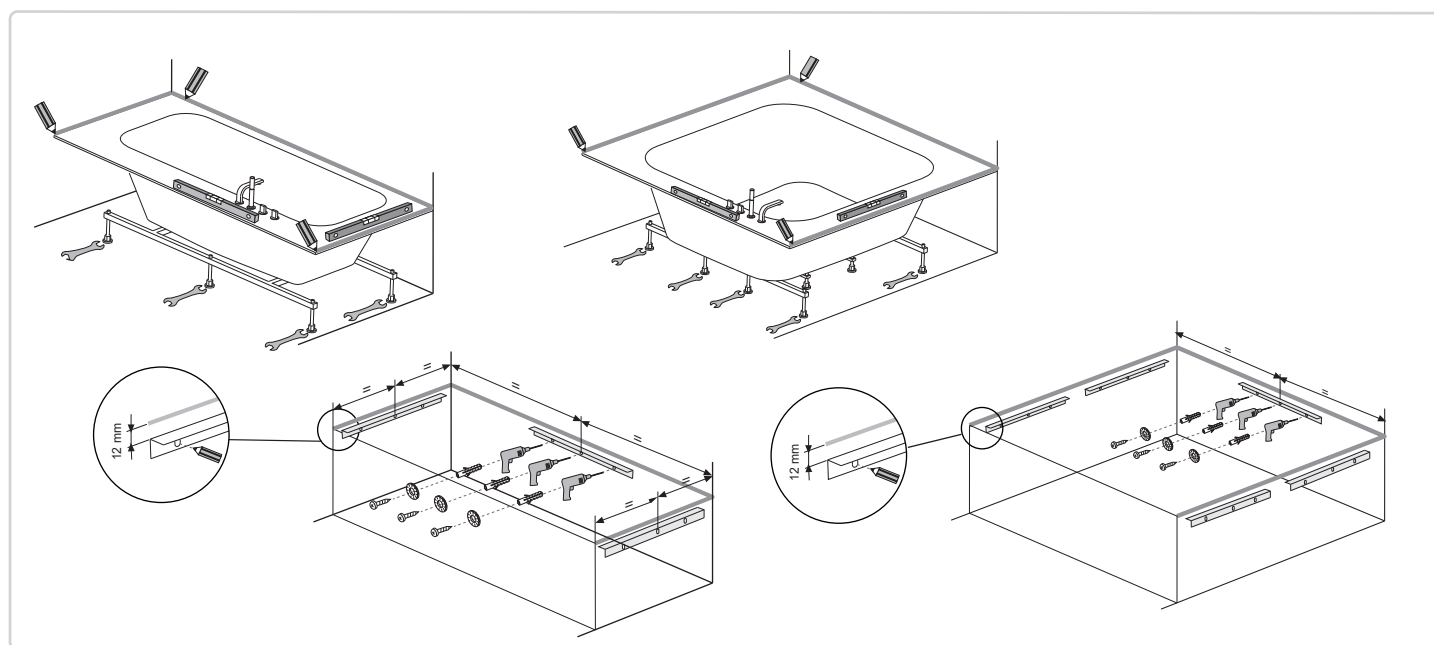

3

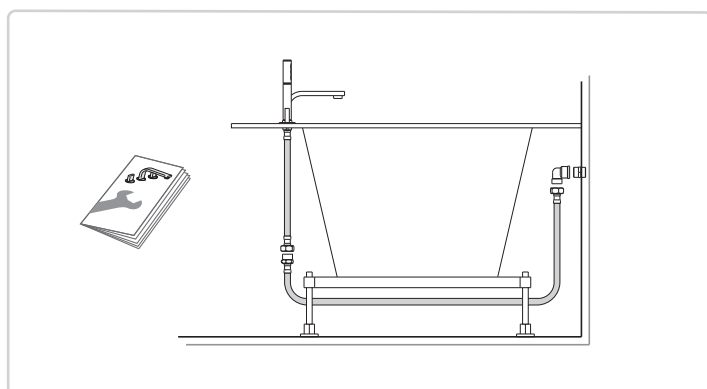


4

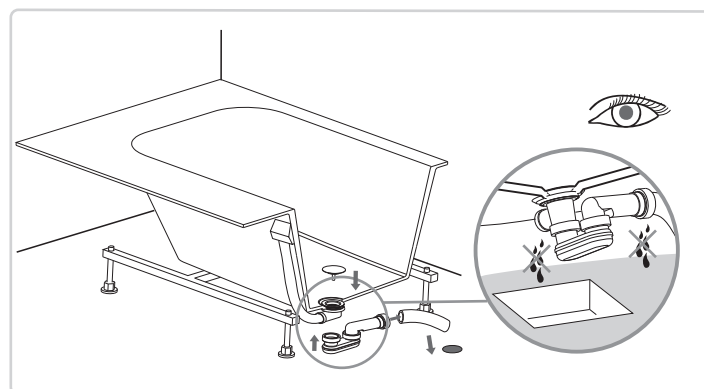


Montage

Alfa Fusion Badewanne

5

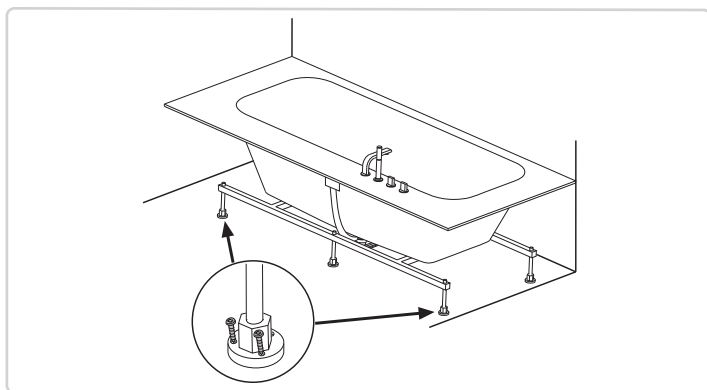

6

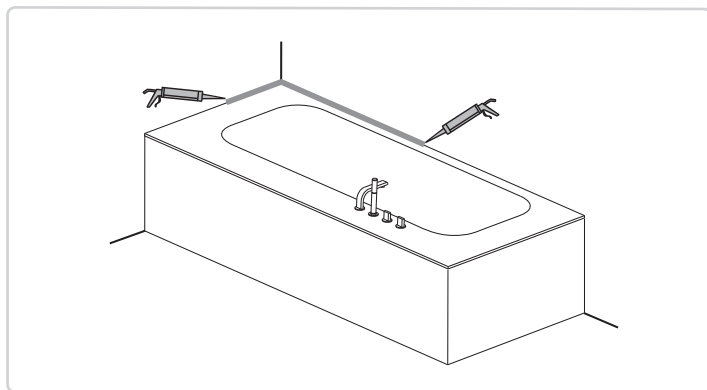

Klebstoffe und andere (geliefert bei hidrobox)



Silikondichtstoff
310 ml Kartusche